

大切に保管してください

N8115-10 EXPRESSBUILDER 組込みキット

組み立て・取り扱いの手引き

組み立てを行う前に

このたびは、本製品をお買い上げいただきまして誠にありがとうございます。

本製品を安全にお使いいただくため、ここで説明する注意事項を読み、ご理解・ご確認の上でご活用ください。
また、本製品を取り付けるときは、本体装置に添付のユーザーズガイドを参照し、ご理解・ご確認の上、作業してください。ユーザーズガイドは、本体装置に添付の EXPRESSBUILDER へ格納しています。
なお、本書は大切に保管してください。

本製品に格納される情報について

- ・ 本製品は、NEC Express5800 シリーズに標準添付の「EXPRESSBUILDER」におけるセットアップに関する内容を格納するための内蔵型専用メディアです。
- ・ 本製品は、NEC Express5800 シリーズに標準添付の「EXPRESSBUILDER」に含まれるセットアップ用および保守用のツール類や、これらのツール類で使用するパラメータのみを格納することができます。

留意事項

- ・ 本製品は、NEC Express5800 シリーズ本体装置に添付のユーザーズガイドに記載された用途以外には使用しないでください。それ以外に使用した場合、本製品、本製品に格納したデータ、または本製品を搭載した本体装置に与える影響について、弊社では責任を負いかねます。
- ・ 本製品は保守交換時に格納されているデータの複製・復旧が行えません。交換後にお客様にてデータの再格納をお願いします。

N8115-10 EXPRESSBUILDER 組込みキット
組み立て・取り扱いの手引き



安全について



注意

注意事項を無視して本製品を取り扱くと、サーバの故障、人体事故、火災、周辺機器の損傷を引き起こす原因となることがあります。



本製品を本体装置へ取り付け、取り外す際は、必ず電源プラグをコンセントから抜き、外部装置と接続しているケーブルを外してください。故障や感電する恐れがあります。



本体装置内部に手をいれるときには、指をはさんだり、ぶついたりしないように注意してください。



ネジは本体装置内部へ落とさないよう、十分ご注意ください。
故障や感電の原因となります。



本製品を梱包箱から取り出した後は、ほこりの多い場所や水などの液体のかかる恐れのある場所に置かないでください。



本製品を梱包箱から取り出した後は、強い磁気を発生させる物の近くに置かないでください。



本製品の端子部分を素手で触ったり、本製品を直接机の上に置いたりしないでください。故障の原因となります。



本製品の取り付け、取り外しを行う前に、身近な金属（アルミサッシやドアのノブなど）に手を触れて、身体の静電気を取り除くようにしてください。

本製品を本体装置に増設するときは、最寄りの保守サービス会社に依頼することをお勧めします。


まえがき

本製品は、Express5800/ R110d-1M, R120d-1E、R120d-2E 専用の USB フラッシュメモリです。本製品を取り付けることにより、EXPRESSBUILDER (ドキュメントと一部のソフトウェアを除く) を格納することができます。

構成品

梱包箱には、次の部品が入っています。ご確認ください。


項番	品名	数量	備考
1	内蔵USBフラッシュメモリ	1	
2	ネジセット	1	ネジセット1式に、USBフラッシュメモリを取り付けるためのネジが1本含まれています。
3	組み立て・取り扱いの手引き	1	本書
4	保証書	1	
5	Nコードラベル	1	

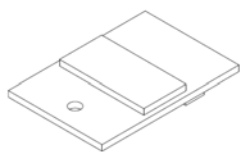


内蔵USBフラッシュメモリ x1



ネジセット x1



組み立て・取り扱いの手引き x1



保証書 x1



Nコードラベル x1

取り付け方法・データ格納方法

本製品の本体装置への取り付け・データ格納は、サーバ添付のユーザズガイドに従ってください。

Keep this document carefully.

N8115-10 Internal Flash Memory Assembling and Handling Guide

Before Installation













Thank you for purchasing this product.

In order to ensure a safe upgrade of your server, read this document carefully.

To install this option product to your server, read, understand and confirm the instruction (including CAUTION) in User's Guide of the server prior to installation. User's Guide is included in EXPRESSBUIDER.

Keep this document carefully.

Safety Information

 CAUTION	
	Make sure to refer to User's Guide provided with your server when mounting any optional device/board/peripheral into your server.
 	Prior to installing or removing an option, make sure to unplug all system AC power cords from their electrical outlets. Remove all cables connecting the system with external devices. Failure to disconnect the power cords before opening the system can result in personal injury and equipment damage.
	Note sufficiently that your fingers may not be caught or cut by a mechanical part at inside of server.
	Make sure not to drop screws or any conductive parts in the server. Failure to do causes the server to malfunction or an electric shock.
	After taking out the DIMM boards from their packaging, try to keep them away from dust and liquids in order to avoid accidental damage.
	After taking out the DIMM boards from their packaging, do not place them near a device that is generating intense magnetic fields
	If an error message is displayed on the display after completing the upgrade installation, refer to the Error Message List in the User's Guide provided with your server.
	Make sure to install the two DIMM boards as a single bank. For detailed descriptions of the bank scheme, refer to the User's Guide provided with your server.
	Touch any metal surface nearby (window frame or doorknob) to discharge the static electricity from your body before mounting any optional device/board/peripheral.
	Do not touch the connector on the DIMM board with your bare hands nor place the board directly on top of a desk without adequate anti-static precautions. Failure to do so can result in equipment damage.

Introduction


The N8115-10 Internal Flash Memory is designed for NEC Express5800/R120d-1E and R120d-2E.

Checking components

The following components are included within this package.

When there are lack parts, damaging and so on, contact your sales representative.

No.	Item Name	Qty.	Remark
1	Internal Flash Memory	1	
2	Screw set	1	One screw for Flash Memory is included in a Screw set.
3	Assembling and Handling Guide	1	This document
4	Warranty Card	1	For use in Japan only
5	N-code Label	1	

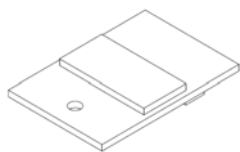


Internal Flash Memory x1



Screw set x1



Assembling and Handling Guide x1



**Warranty Card x1
(For use in Japan only)**



N-code Label x1

How to install Internal Flash Memory

In case you install this product into your server, refer to User's Guide provided with your server.